 


Massage Chair

LC6300
Manual

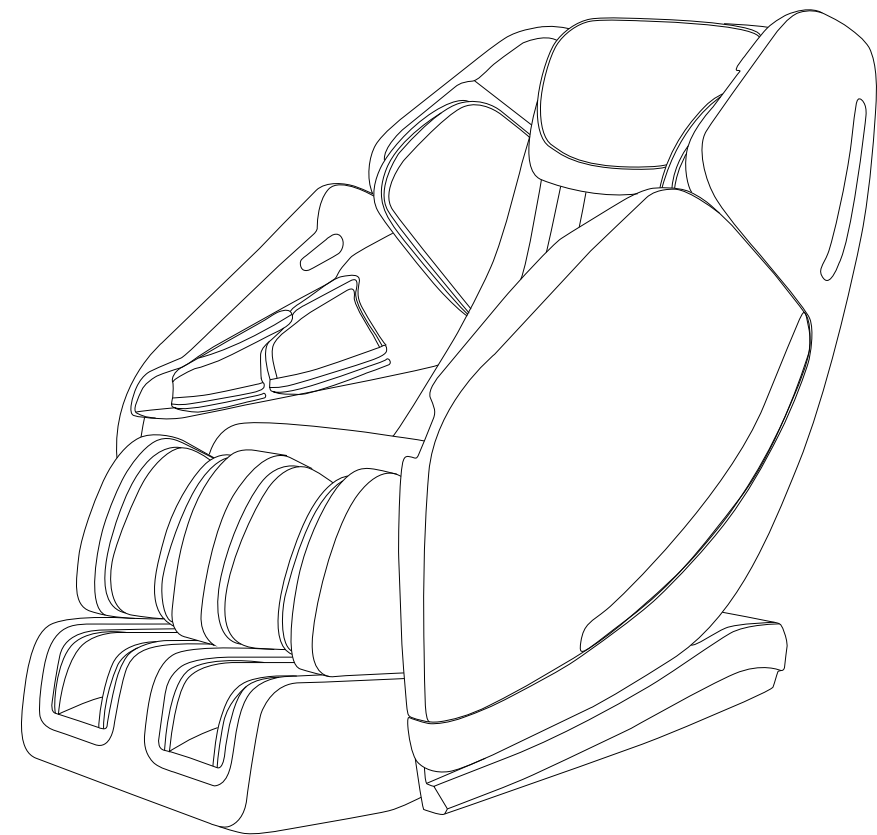

M_LC6300_2019
Printed in China

Contents

Thank you for purchasing our massage chair.
Please read the owner’s manual (operating manual) before use.

Safety precautions.....1-4

Main function.....5

Components & Descriptions.....6-8

Before use.....9-13

Adjusting massage chair.....13-15

Start massage.....15-19

After use.....19

Troubleshooting.....20

Safety check.....21



Storage and care.....22

Product specification.....23




- This product is designed for residential use.
- Use this product only as described in this manual. Any other use is not recommended by the manufacturer and may cause fire, electric shock or injury to persons.
- Remember to keep the manual in an easily accessible place.

Safety Precautions






- Be sure that you have read these SAFETY PRECAUTIONS thoroughly before using.
- The Operating Manual contains important information about how to use the chair safely and correctly, avoiding possible damage to property or injury to persons using the chair and others.
- The Symbols shown below are used throughout the Operating Manual to highlight important safety instructions. Please adhere to all precautions.




 WARNING	This action could result in serious injury or death.
 CAUTION	This action could result in personal injury or damage to property.







[Symbols]

	The symbol on the left means “Do not disassemble.”
	The symbol on the left means “Unplug the chair.”
	Symbol is inform you the content of “WARNING”and “CAUTION”(The Symbol on the left means “read the ”WARNING” and “CAUTION” before use”)


- Remember to keep this Operating Manual in an easily accessible places.





 WARNING	
If any of the below abnormal conditions exist or occur, please stop operating the product immediately. Electric shock or risk of fire may occur. Turn off the main power switch and unplug the unit from the wall outlet. Do not try to repair the malfunctioned product and contact the manufacturer.	
	● Do not operate this product during a lightning storm or sound of abnormal noises coming from the unit.
	● Do not operate this product after a spill or contact with moisture.
	● Do not operate this product after any object falls inside the massager.
	● Do not operate this product if the casing is broken, drooping or tipped over.
 CAUTION	
	● Discontinue the use of this product if it becomes uncomfortable. ● Use this product on a flat level surface. ● Before operating, make use the product’s controls are properly functioning and not damaged.


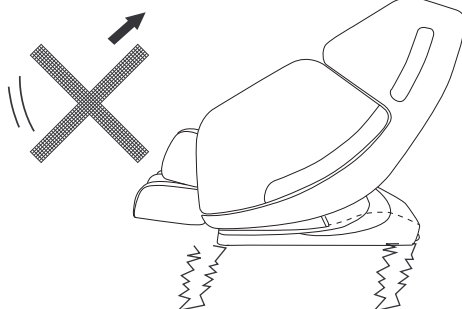 
 WARNING	
 PROHIBITED	The following persons must not use this product Person who has thrombosis, serve aneurism, acute varicosity or skin infection, including inflammation of the hypodermis.
	Persons with any of the following conditions should seek medical advice before using. 1.People who has electronic medical devices easily susceptible to electromagnetic interference 2.People with malignant tumors 3.People with serious heat disease 4.Woman who is in menstrual period or pregnant 5.Sensory disturbance caused by peripheral circulatory disorder due to diabetes 6.People with sensory disturbance 7.Persons being treated for personal injury 8.High fever (100°F or higher),such as acute inflammation,high blood pressure or chills 9.Persons with sickness or under bed rest orders 10.Osteoporosis, spinal fractures and acute pain 11.Inflammation due to sprains and muscle strain It is not recommended for those who are in uncomfortable or sickness
	The time of a program can be adjusted as 10,20,30 minutes, Do not over massage or continue to massage a specific area of the body longer than 30 minutes.Please stop for at least 30 minutes before restarting the massage chair. Continually using the massager for extended periods of time can result in over stimulation of the muscle or nerves.


 WARNING	
 FORBIDDEN WET HAND	Wet Hands Forbidden-Do not touch the power outlet, plug or power cord with wet damp hands as this will cause electric shock and damage to the unit.
 CUARD AGAINST DAMP	Protect Against Liquids-Do not spill water or other liquids on the product. Do not place the product in humid environments such as bathrooms.This may result in electric shock or malfunction.
 REQUIRED ACTION	Caution is necessary when operating the unit by or ner children, invalids, or pets.
 DO NOT DISASSEMBLE	Do not try to disassemble or repair the product, power cord, or control panel as this may result in malfunction or risk of fire.
 PROHIBITED	Do not alter or tamper with the power cord. Do not bend,stretch, twist or wrap the power cord. If the power cord is damaged or broken this may result in electric shock, short circuit or fire.

Safety Precautions

! WARNING	
 PROHIBITED	Do not let children or mentally retarded persons operate the product alone. Keep children or mentally retarded persons away from the product when not using.
	Use only 120V~ power.Power cord can not be wrapped on the product to avoid electric shock,short circuit or fire.
	Do not put hand or foot into the gap between backrest and seat,or beneath the seat.It may cause injury or accident.
	Do not operate the product on head,belly,it may cause injury or uncomfortable.
	Do not use the product with body naked,it may cause damage to the skin.
	Product can not be used when cover is disconnected or damaged.

! CAUTION	
 REQUIRED ACTION	<ul style="list-style-type: none">● In the event of a power failure-switch OFF the main power switch and disconnect the unit from the power outlet.
 FORBIDDEN WET HAND	<ul style="list-style-type: none">● Do not touch the power outlet or power cord with wet hands.
	<ul style="list-style-type: none">● Disconnect the unit from the power outlet when not in use.● Disconnect the unit from the power outlet before cleaning the unit.● To prevent damage, electric shock, or short circuit, disconnect the unit from the power outlet by holding the power plug and not by the power cord.
 PROHIBITED	<ul style="list-style-type: none">● Do not use this product during or after drinking alcohol.● Do not hang heavy objects on the power cord.● Do not use this product near open flames, fires, or heating devices.● Do not smoke while using this product.● Do not place this product direct heating devices including heating floors.● This product is not intended for use by children, invalids, or persons with reduced mental capabilities.● Children should not play with or sit on this product as it may result in injury.

! WARNING	
 PROHIBITED	<ul style="list-style-type: none">● Do not pull hard or use knife,sharp object to scratch the fabric,it may cause injury or accident.● Do not bend,pull power cord hard,it may cause fire.● Controller can not fall or be impacted,it may cause wrong movement or malfunction● Do not use the product when power cord and plug are damaged or plug is loose,it may cause electric shock,short circuit or fire.● Mind fingers when open or close the chair backrest.● Do not exert external force on the parts,it may cause malfunction or injury.● Do not use the product when sleeping,it may cause injury and discomfort● Move the product by using rollers,do not move it not in rollers' direction.● Place the product gently after moving
	


! CAUTION	
 PROHIBITED	This product is for residential use only. Commercial applications will not be warranted.
	Do not operate this product with any coverings or blankets as excessive heating can occur and cause risk of fire.
	Make sure a tight connection between the plug and power outlet. Wipe away any dust that may accumulate. Risk of electric shock, short circuit or fire.
	Do not stand or step on the product. Excessive force may result in injury, malfunction or risk of fire.
	Do not use this product near open flames or flammable gas as it may result in product distortion, malfunction, or risk of fire.
	Do not use this product where aerosol spray products are being used or oxgen is being administered as it may result in product distrotrion, malfunction, or risk of fire.
	Do not use abrasive solvents to clean this product as it may cause damage to the internal parts,the exterior finish or casing.
	Keep children, invalids, and pets away from the functioning product.
	This product is not intended to be used by persons with reduced mental capabilities, ill or under bed rest.

Main function


1. Shape detection, before massage, system detects shape of user.
2. Zero Wall technology, one-touch slide forward.
3. SL track
Longest SL track length of 1350mm serves to reach thigh, fit for height range from 150CM to 195CM.
4. 3D massage mechanism
3D 4-wheel massage mechanism protrude to 7.5cm makes massage more comfortable.
5. Whole body wrapping massage
40 groups of airbags to squeeze and soothe tired shoulder arms and legs.
6. Blue tooth technology stereo music player
Connect your cellphone via wireless blue tooth of the chair, you can enjoy music stored in your phone.
7. Zero gravity
Provide a weightless feeling to relieve tension, stress and muscle discomfort.
8. Heating function release body fatigue
Advanced carbon fiber heating technology warms user's waist and hip, safety and high efficiently.
9. Tailored sole rolling massage gives feet a healthier revitalized feeling.
10. Flexible 24cm leg part.
11. Quick operate button makes easy to control.

Components & Descriptions

 ● Chair

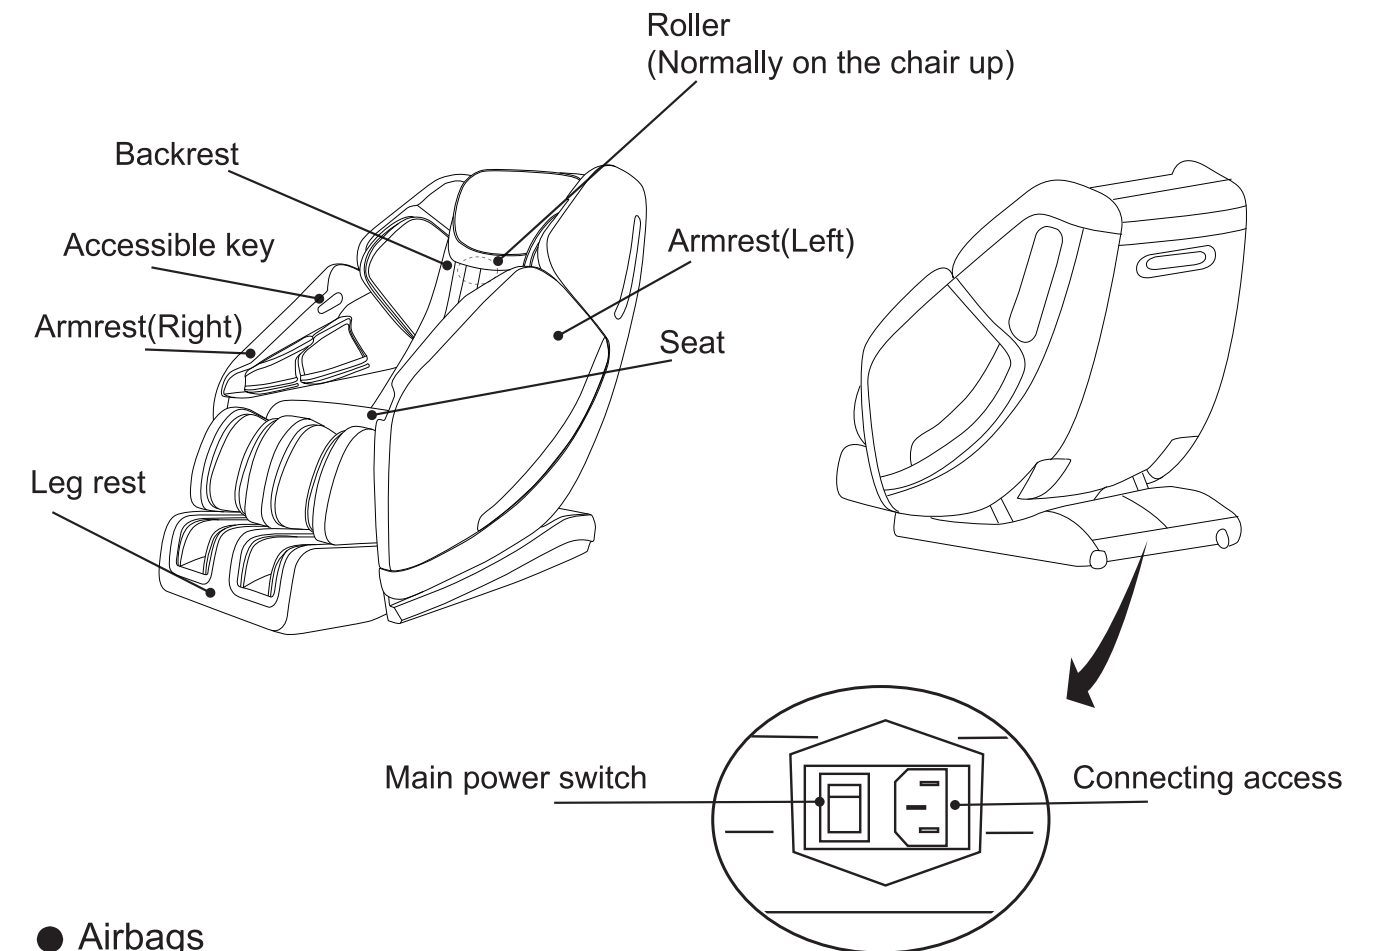

● Airbags

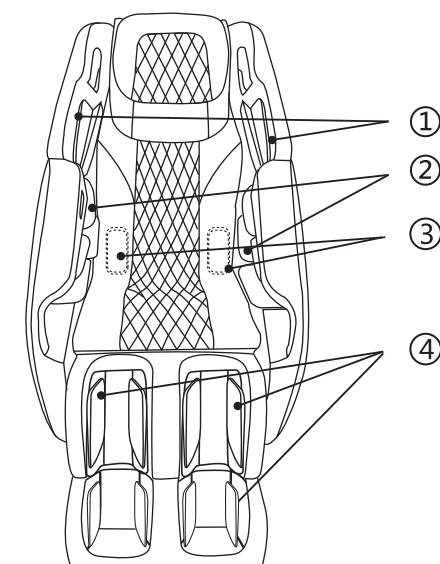 

- | | |
|----------------------------|-----|
| ① Shoulder massage airbags | X4 |
| ② Arm massage airbags | X16 |
| ③ Waist massage airbags | X4 |
| ④ Leg massage airbags | X16 |


● Power cord and power socket

Attention1:Before inserting power cord,please ensure main power switch is off.
Attention2:Do not disassemble or replace the power cord when it is damaged.A retailer or a qualified professional shall be needed.

● Main power switch

Turn on the main power switch, massage chair into standby mode

 ● Controller

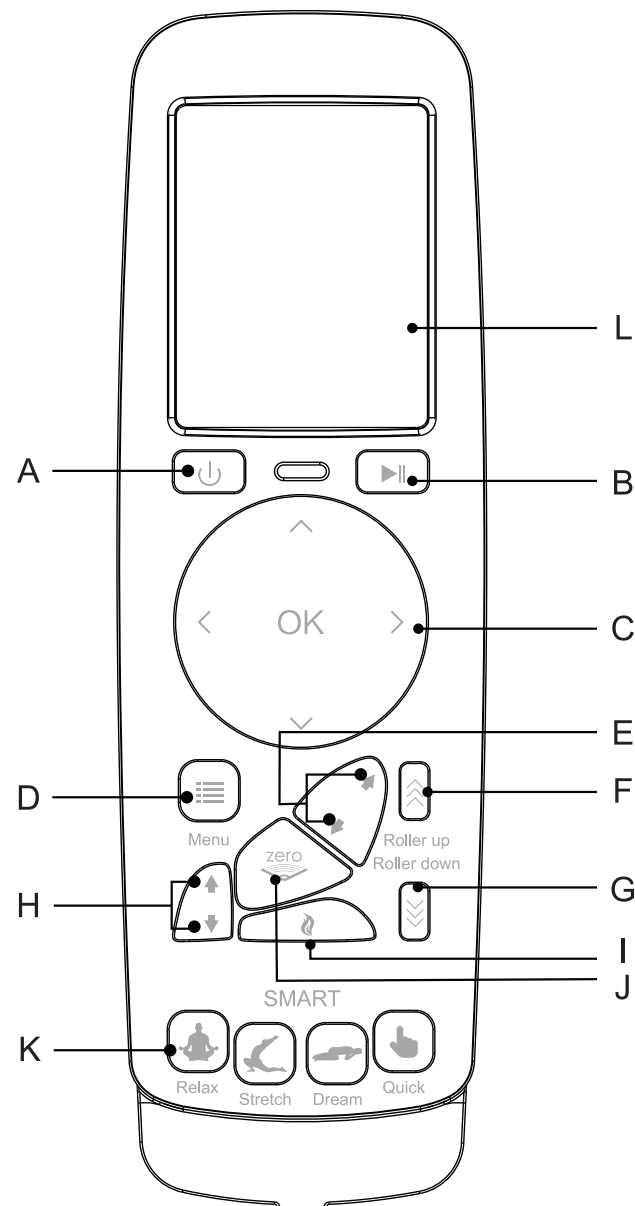

A	Power	Different mode can be chosen in the menu options after turn on the power
B	Pause	Press this button, the chair stops massage. Press this button again, the chair go on with massage
C	OK	Choose different program and press “OK” to confirm
D	Menu	Press this button, you can select Smart massage, Auto massage, Manual massage, Air massage, Roller massage and heating function
E	Backrest up/down	Press this button to raise or decline the backrest
F	Roller up	Press this button to raise back roller’s position
G	Roller down	Press this button to lower the back roller’s position
H	Footrest up/down	Press this button to raise or decline the footrest
I	Heat	Press this button to Warm the user's waist and hips
J	Zero gravity	There are two levels of zero gravity. Prone position can be selected by pressing the zero gravity button
K	Smart	There are 4 smart programs in this area. Press either of them to enter into the program
L	LCD	LCD shows detailed operation condition



WARNING

- Please do not spray water or other liquid on the chair.
- Do not operate the chair with wet hand.

 


CAUTION

- Do not sit on the controller, do not drop or step on the controller. Do not pull over the wire.
- Do not press the button with sharp object or it will result in damage.

Before use

Armrest assembling step

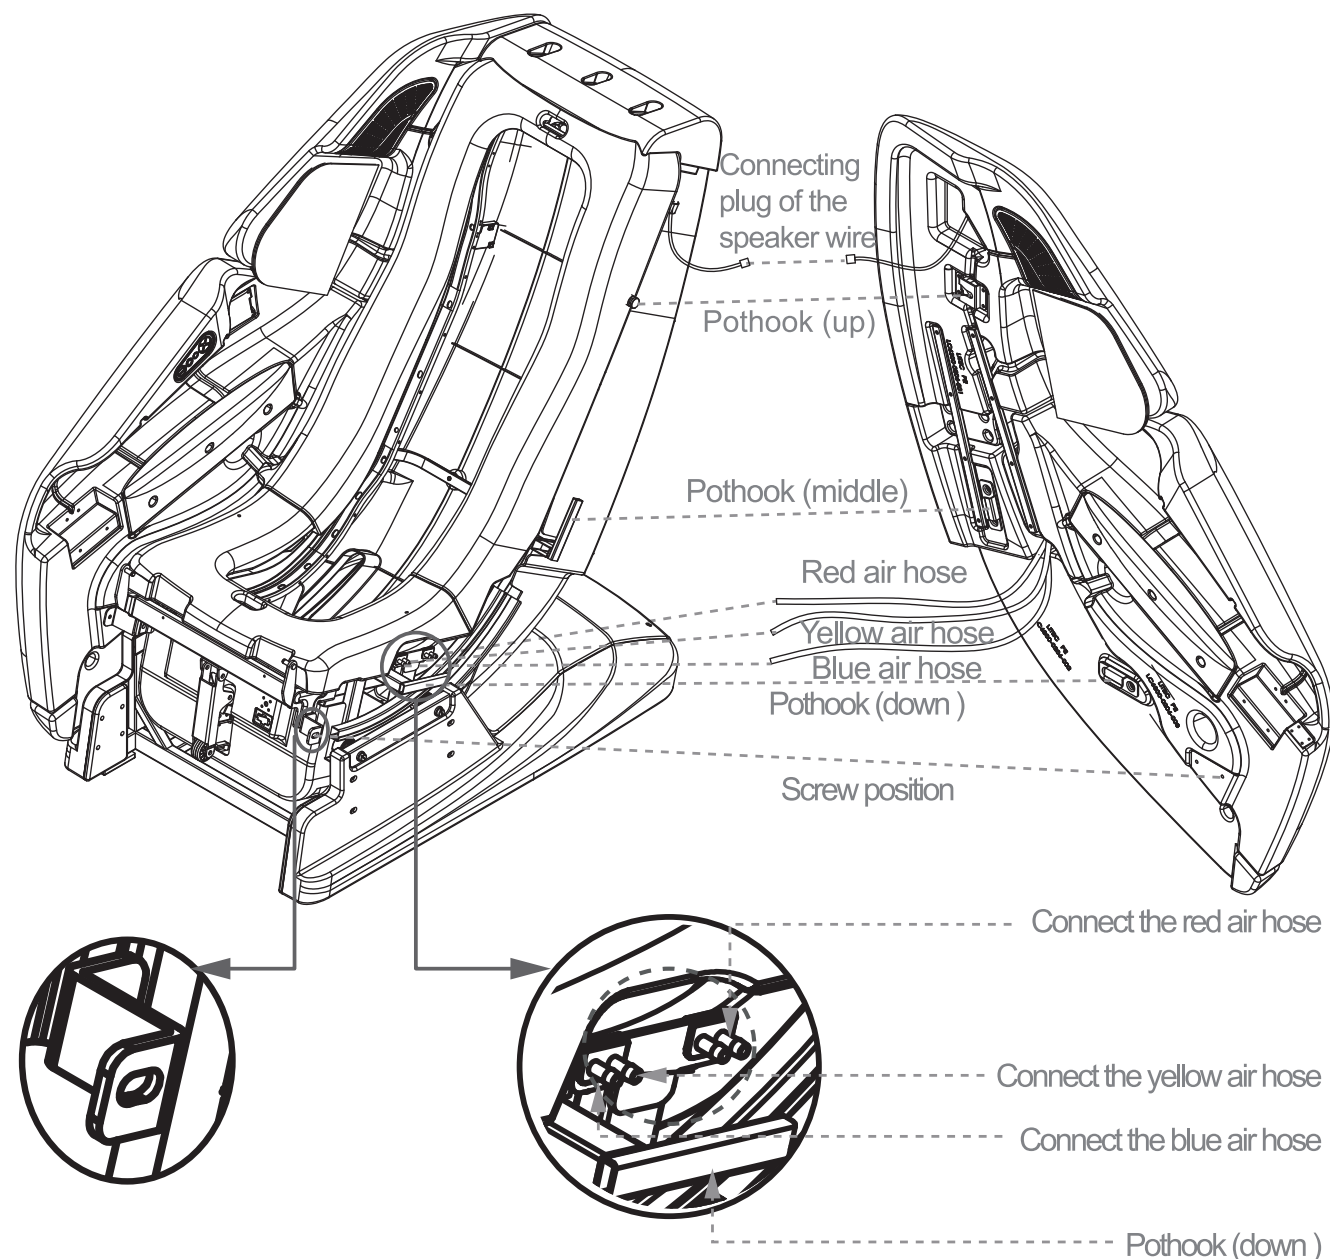

Step 1 Connect the three air hose with the same colour between the main part and the left armrest part. Connect the plug of the speaker wire at the top part.

Step 2 Connect the up pothook of the left armrest to the main part, press down the armrest, then connect the two down pothooks. Be careful with the air hose when press down the armrest .

Step 3 Connect the left armrest and the main part by screwing the bottom part as the picture above.

Where to place the chair

 
Please make sure that the massage chair has about 37cm in front of it, leaving about 9 cm behind the chair to allow free reclining of the backrest.



CAUTION


- Please do not use in a humid place such as sauna or bathroom.
- Place on a levels surface before use.
- Please do not use in the following situations: in a utility room or dusty place or in high temperatures (over 40 °C).
- Do not place it in the sun or near heating appliances.
- Please keep cigarettes, ashtrays or flammable goods away from the massage chair.

- To prevent damage to the floor and reduce noise, please lay carpet under the massage chair (do not use an electric blanket).
- Please be careful placing this machines, as it is heavy.
- To avoid excessive noise, make sure the massage chair is a minimum of 100cm away from the TV, radio, and other AV machine.

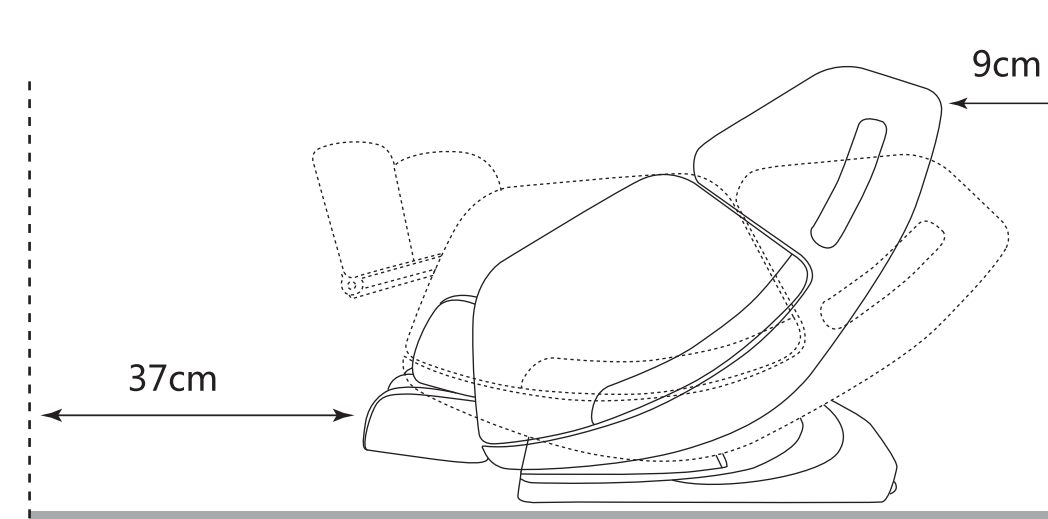

- When the temperature is too low to run the machine, please increase the ambient temperature gradually, do not increase the temperature in sudden. Please move the chair to the warm place and keep on waiting for 1 hour before starting. Or it will result in moisture of parts and abnormal operation.

 - Please ensure there is a chair and accessories inside the packing box


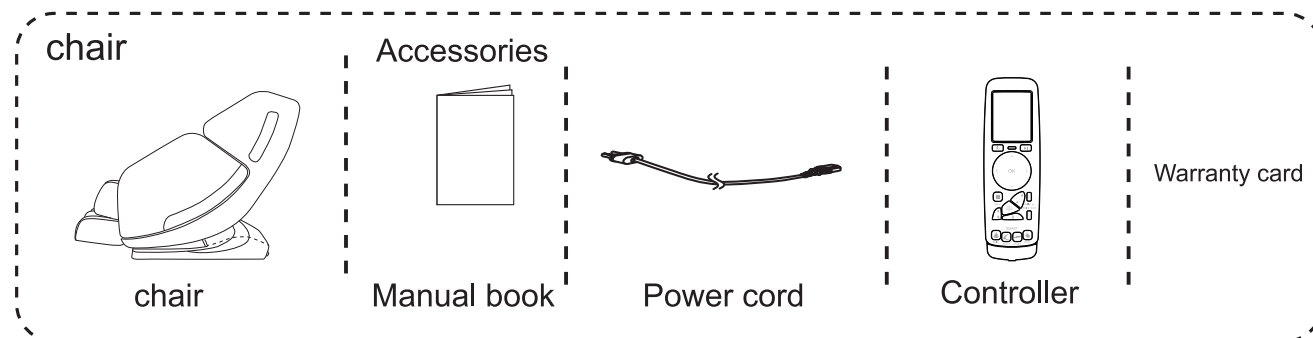


How to move

When moving, please turn off main power switch, then unplug the power plug.

Using caster to move

  Please put the back of the chair to the bottom and then hit the rear wheel, then move

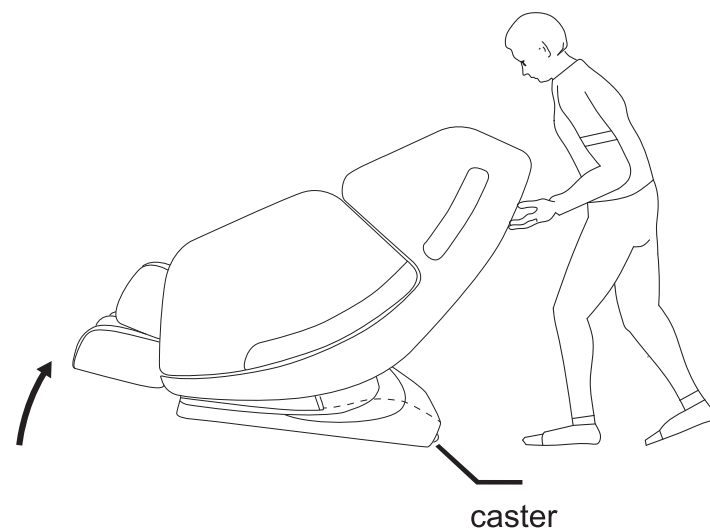


CAUTION

- The chair cannot be moved if the passage is less than 83cm in width.
- Contact the dealer in case you cannot move the chair normally.
- Due to the heavy weight of the chair, make sure that it will not damage your waist or other parts of your body during moving.
- Controller is connected to the chair, make sure it does not fall during moving.
- Do not move the chair with person loaded.
- Please move the chair after unplugging.
- > Otherwise it may cause damages to the power plug, causing fire disaster or electric.


Wire controller connected method

 Connect the connector of the wire controller with the connector on the right side of the seat part and tighten it.

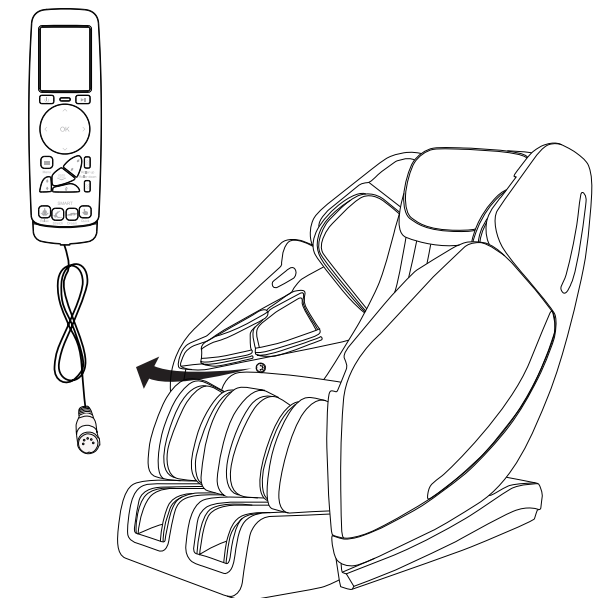


How to switch on the power

 ① Insert power cord into outlet

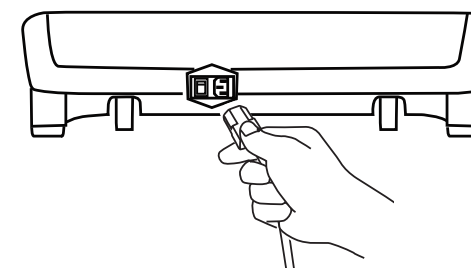

 ② Turn on main power switch on the back of the chair

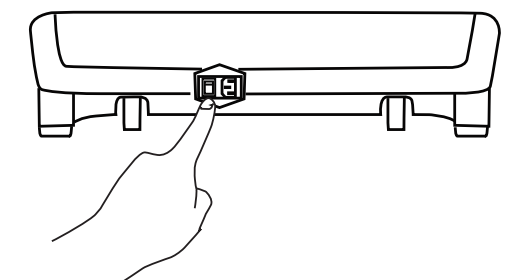

※ If the rollers get stuck, turn off the switch and press the ON/OFF button, the roller will be back to its initial position.



WARNING

- Do not connect power cord to an external transformer



CAUTION

- Ensure the main power switch is off before plugging the power socket or controller.
- Please insert power plug and controller plug fully
- Read this manual book carefully before using, set the chair according to the requires, ensure normal operation

 
Connecting the power

Check the power cord, power plug, socket on the chair, main power switch, controller are unbroken for the first time use or use after long time storage. Then plug power cord.

Confirm the fabric

Make sure if the fabric is damaged according to the following procedures before use.

- ① Open zipper and back cushion from one side
- ② Put your hand between cushion and backrest to see if the fabric is damaged.

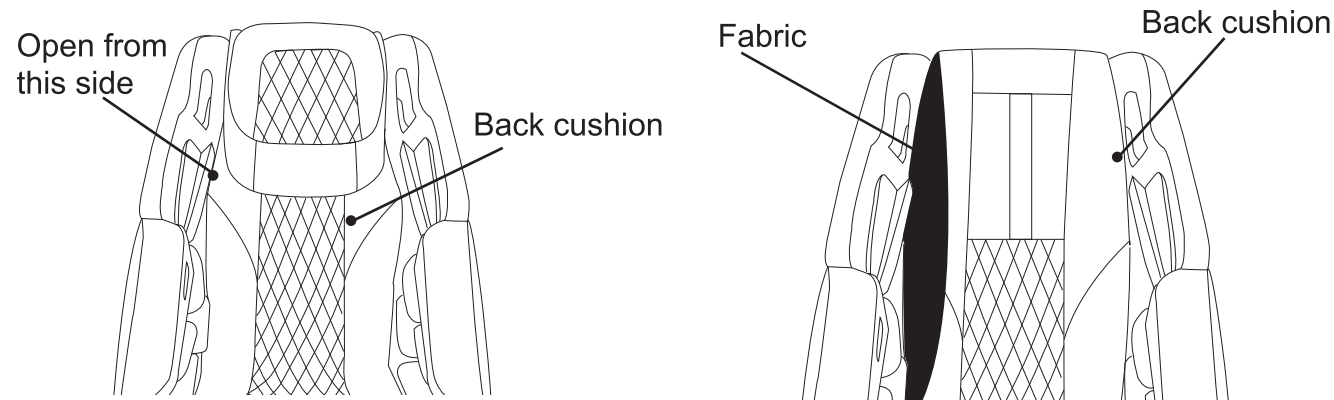

CAUTION

Before using the chair, confirm that whether there is damage in the material of the armchair or of other parts. In case of damage, even the smallest tearing in the chair, please stop using it immediately, turn off the power switch, unplug the chair, and contact the customer service center. Never use the armchair with dismantled cushion or damaged material, otherwise there will be serious safety hazard.

Adjusting massage chair

Sitting in the chair


Under general circumstances, the rollers are laid folded at the upper position of the backrest, besides, legrest declines to its lowest position. Please ensure the position of the rollers and legrest. If the rollers and legrest are laid other place, restart the chair, keep on waiting for the parts return to its initial position, then sit in the chair slowly. After using, slowly step out of the chair.



CAUTION

- Do not sit in the chair when legrest is rising, or after legrest rises, it may result in accident or reclining chair, causing personal injury.
- Raise the chair before using. Enjoy the massage from light massage course. Adjust the angle of your reclining angle according to your body figure.
- Do not stand on the legrest, it will break the legrest or even the whole chair.

Adjustment of chair angle

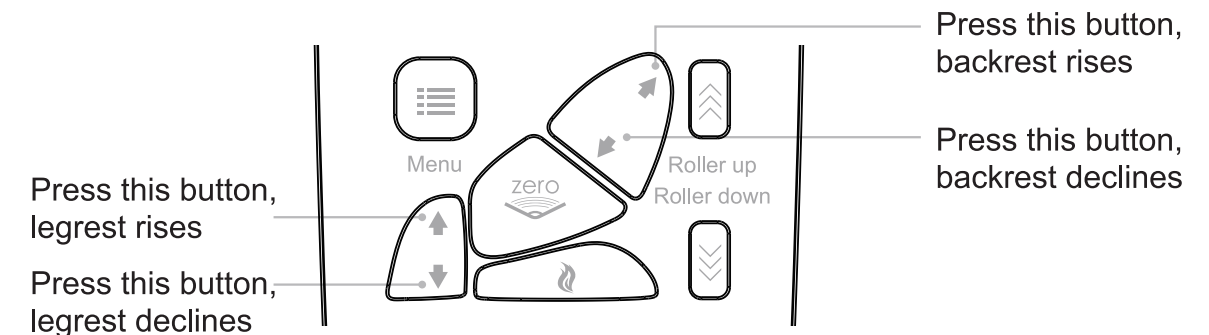


WARNING

When adjusting the Angle of the massage chair, please make sure there are no people around (especially children) or pets. In addition, please ensure that there is about 37cm left in the front of the massage chair and more than 9cm left in the back, and there is no foreign body blocking in the movement path of the massage chair.

Adjustment of legrest

Legrest can be lengthened if feet can not extend well. It can be lengthened by 240mm.

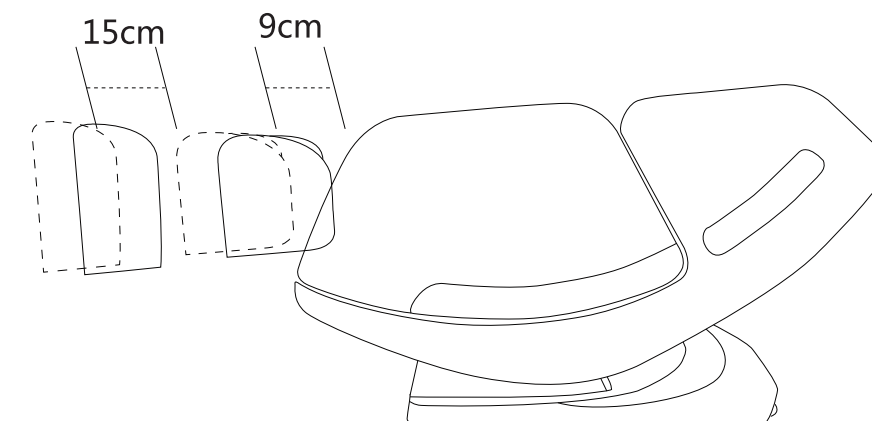


WARNING

When lowering legrest, make sure there is no person (especially children) or pet around. Besides, hands or other object can not get stuck under the legrest.

Adjusting the pillow

- If massage intensity of neck needs to be strengthened, Please unzip the headrest, take the headrest off.

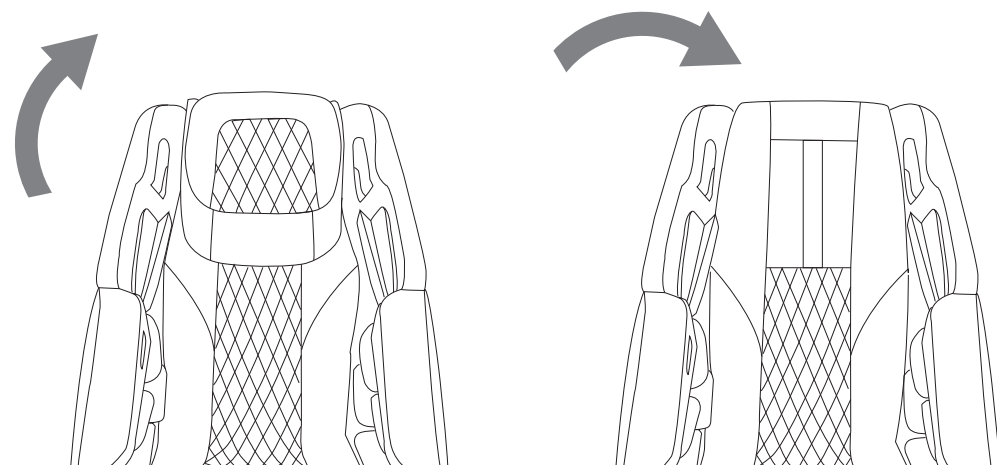


CAUTION


When pillow is folded, massage intensity of neck is strengthened, please keep massage time within 15 minutes.

Start massage

1. Connecting the power, turn on main power switch

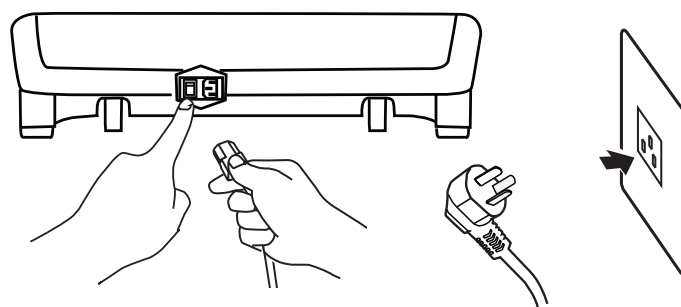

 
2. Press the power button to the menu options

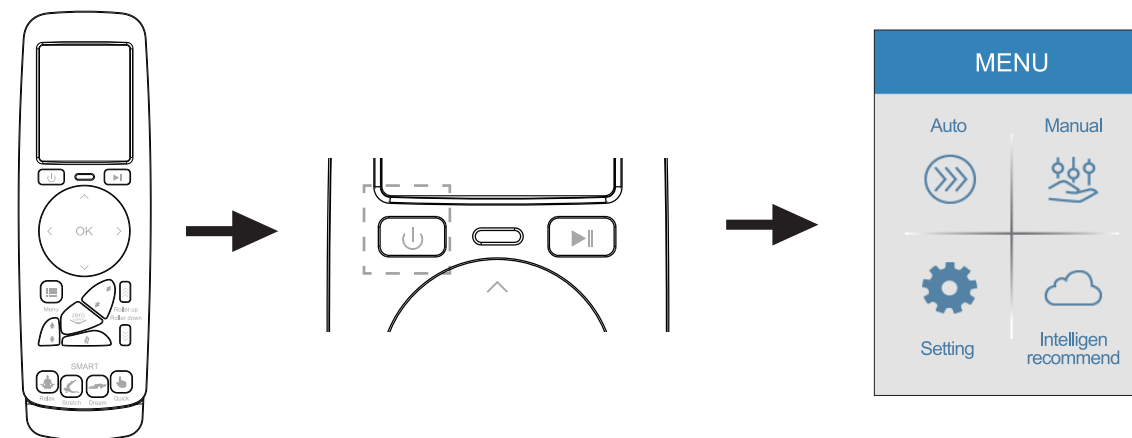


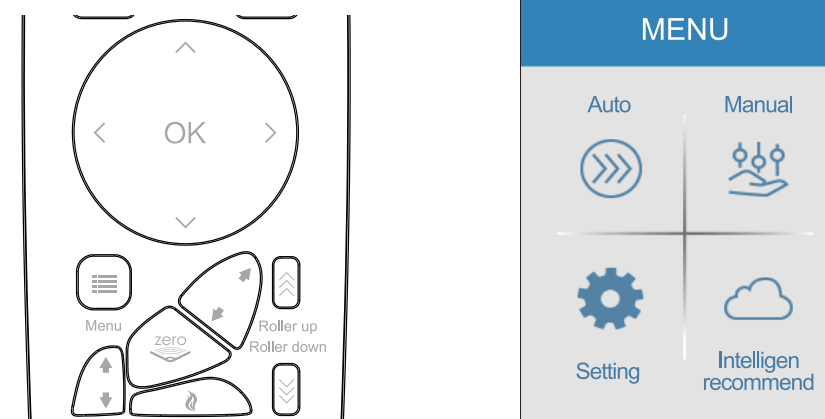 
- Different mode can be chosen in the menu options after turn on the power.

3. Select program to start massage

- Under “Relax” program, you can switch to either of the four massage programs in the Smart area by pressing the button. The Quick Program can demonstrate all of the massage functions in 6 minutes.

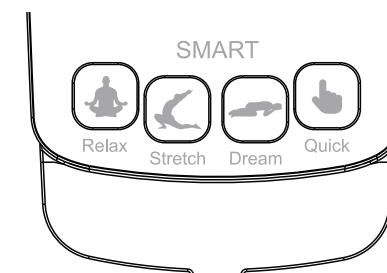 


- Press Menu key you can select Auto program or Manual program by pressing 4-way key and OK key. Press “” back to the previous menu.




Start massage

- There are 8 Auto programs: Relax, Stretch, Dream, Quick, Vitality, Neck/Shoulder, Waist/Back, Massage. These programs can be chosen in the AUTO programs.

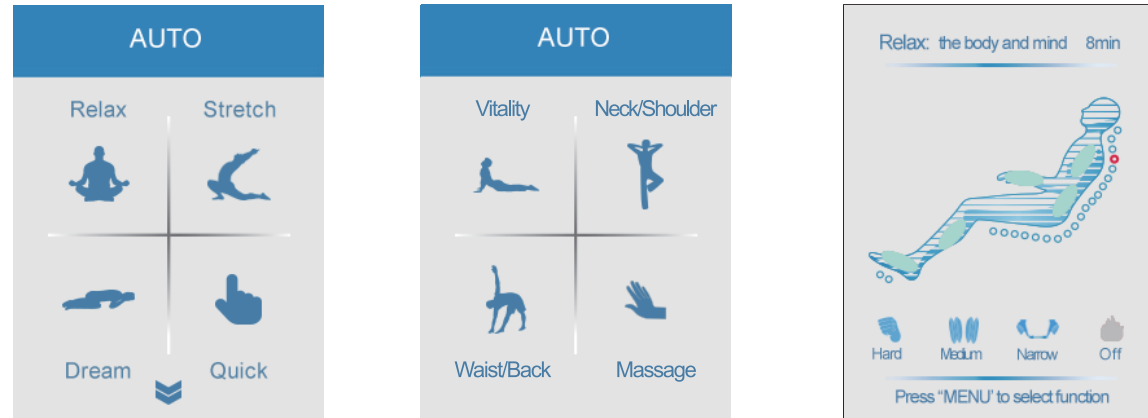

 - There are 18 manual programs: Roll, 3D roll, Forward knead, 3D forward knead, Backward knead, 3D backward knead, Tap, 3D tap, Knead & Tap, 3D knead & tap, Knock, Circular knock, 3D knock, Knock & Knead, Circular knock & knead, 3D knock & knead, Scrap, 3D scrap.

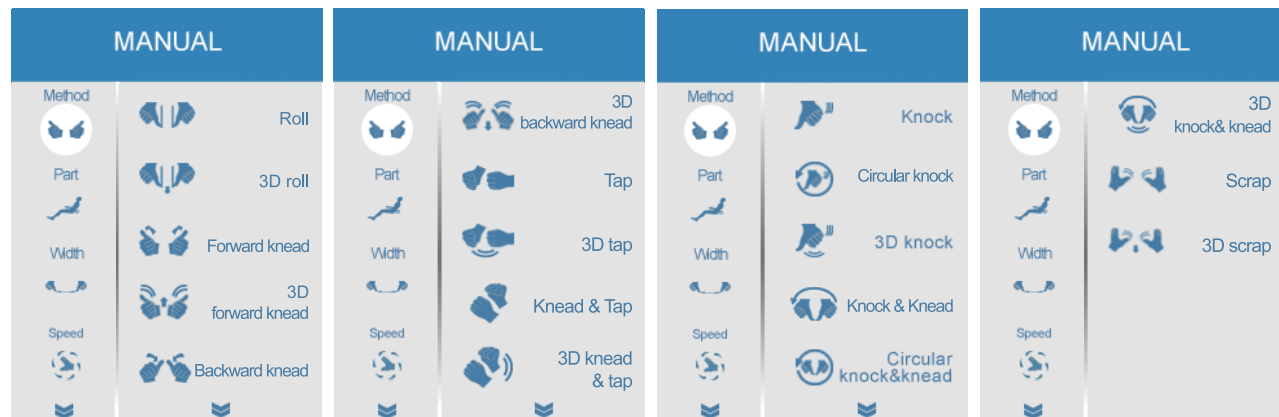


- There are 3 position selections available in the manual program.




- There are 3 width of rollers available in the manual program.



 
- There are 5 massage speed in the manual program.

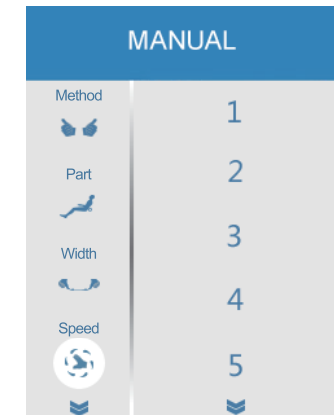

 
- There are 3 intensity available in the 3D massage manual program.

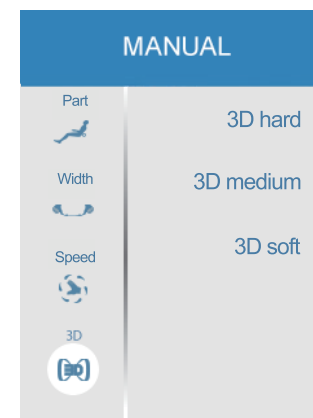


- There are 5 areas for air massage.

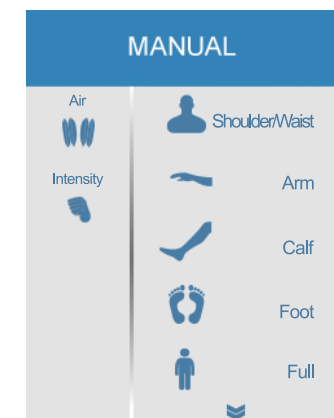 

 - There are 3 sole roller rotations available.

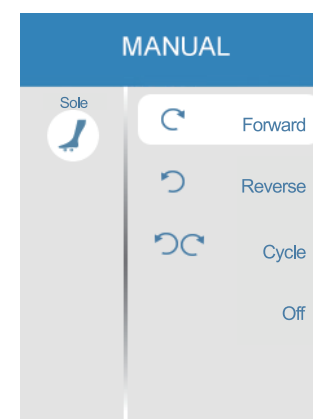

 - Heating function can be chosen in manual program.

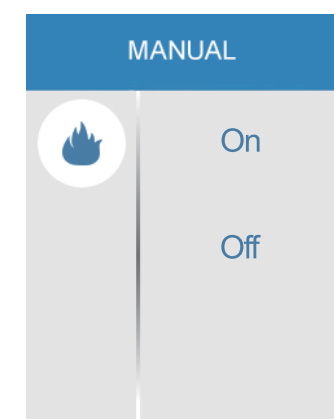



- Under any mode, you can adjust the position, width, speed, add or end air massage, sole massage, heating function by pressing 4-way key and select the corresponding icon.

- Under Air massage mode, you can adjust the position, intensity, width, add or end sole massage, heating function by pressing 4-way key and select the corresponding icon.

- Language and massage time can be selected in setting


(1) Language of English and Chinese can be selected

  (2) Massage time of 10/15/20 can be selected

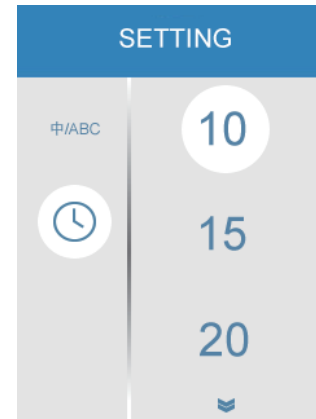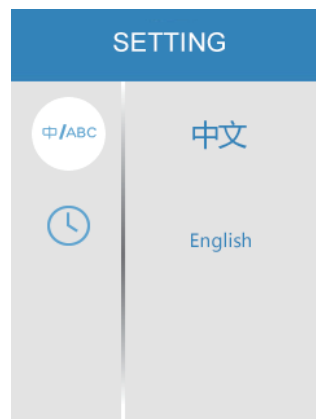

4. Pause

 - Press this button to stop all of the massage function. Press this button again to go on with the massage.

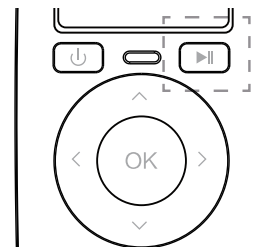

After use

Rise the chair up and lower the footrest completely.

Press ON/OFF key to turn off the chair, wait until chair gets back to its initial status.

After airbags deflate completely, rollers get back to its initial position, sole massage stops, heating stops, then step out of the legrest. Do not stand in the legrest. Turn off main power switch, unplug power plug.

! CAUTION

After you use the chair, turn off the main power switch, and unplug the power plug from the socket.

→ Otherwise, accident or injuries may be caused by children or pets.

After you use the chair, be sure to raise back completely and lower the footrest completely.

 
After you use the chair, please clean it and place it in dry places.

When unplugging the power cord, please do not pull it directly; instead, you should unplug it pinching the power plug.

Please be sure to put the power cord away in prevention of tripping over.

Troubleshooting

If there is still a problem after trying the solutions given in this troubleshooting guide, stop using the chair immediately to prevent accident or injury, and unplug the power plug from the wall outlet. Contact the vendor or your nearest service center for assistance.

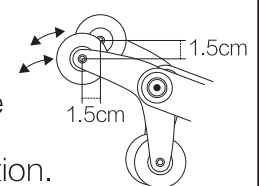Problem	Causes and troubleshooting	
The right and left rollers are out of alignment.	<div>The rollers are designed with an alternating tapping mechanism, so in the stopped position they are sometimes out of line. This is part of the design and is not a malfunction.</div> <div></div>	This is part of the design and is not a malfunction.
The roller moved to the bottom and stopped	<div>The auto timer will cause the rollers to move up to the bottom of the chair when the massage time is finished, so as not to interfere with your movements when getting out of the chair.</div>	
Noise during chair operation	<div>Noises during tapping Sound of the rollers rubbing against the seat cover during kneading Sound of raising and lowering the rollers, sound of roller operations Sound of the air massage cushions Sound of the air pump Sound of air discharge Sound of raising and lowering the Reclining Seat Back</div>	
The rollers stop during the massage.	<div>Sometimes when there is too much pressure to the rollers, they can stop moving temporarily. Slightly lift your body or lightly raise the Reclining Seat Back. (Be especially careful when a person who weighs 100 kg (220 lb) or more uses this chair)</div>	If there is still a problem after the check, stop using the product immediately.
No power or the chair can't work after pressing the button	<div>Check for the following: ① Is the power cord fully plugged into the wall outlet? ② Is the main POWER switch located at the front right of the chair set to ON? ③ Are you pressing two buttons at the same time?</div>	
Abnormal heating on power cord and plug	<div>Stop using immediately.</div>	
<div>Contact the vendor or your nearest service center.</div>		
<div>Anyone other than an authorized service person must not repair or disassemble.</div>		

Safety check

Regular Maintenance Will Preserve the Life of Your Chair

Have you experienced any of these problems?

- The chair does not start with the Main POWER switch set to ON.
- The power cord has been cracked or scratched.
- The power cord or plug becomes abnormally hot.
- The chair produces a burnt smell, abnormal sound or vibration.
- The auto timer function does not work in some cases.
- Other failures.

If you find anything listed on the left, stop using and unplug the power cord from the outlet to prevent failure or an accident. Be sure to contact the vendor or our service center for maintenance.

To use safely

The chair fabric (roller fabric) is a consumable part, and its service life is 3 years (conditions of use: two 15-minute sessions a day, every day).
For safe use, periodic inspection by the vendor is recommended before the end of its service life.
*Durable years vary depending on conditions of use.
* After about five years of use, a professional inspection is recommended even if there are no symptoms or problems. For inspection fees, contact the vendor.

Storage and care

Storage

- After cleaning the dirt and dust, place the chair in a dry place
- If the chair is left unused for a while, please cover the chair to prevent from dust.
- Pets sometimes chew on power cord, so try to keep the pets away from the chair even when it is stored.

CAUTION Do not install the chair where it can come into contact with direct heat, such as direct sunlight or a radiator.

Care and Maintenance

CAUTION ● When cleaning the chair, be sure to unplug the power plug from the wall outlet first. Do not plug or unplug the power plug with wet hands.

[Caring for the Back Pad and Covers]
Soak a piece of soft cloth in lukewarm water in which a small amount of mild detergent has been added. Then thoroughly wring it out before cleaning off any spots or grime.

CAUTION ● The fabric color can change if the chair is in contact with vinyl covers or wall coverings for a prolonged period of time.

[Caring for Other Plastic Parts]
Soak a piece of soft cloth in lukewarm water in which a small amount of mild detergent has been added, thoroughly wring it out, and clean off any spots or grime. Then wipe with a dry cloth so that no detergent residue remains.

CAUTION ● Do not use alcohol-based or other household cleaning products or abrasives because they can scratch or crack the finish or cause color to fade.

[Caring for the Remote Control]
Wipe dirt off the remote control with a dry cloth.

CAUTION ● Never use a moistened or wet cloth. May result in a mechanical failure.

Product specification

Type	LC6300
Power	120V~ 50/60Hz
Rated power	140W
Rated time	10, 15, 20 minutes
Dimension	Approx 830*1570 (1860) *1200 (870) mm (W*D*H) The length and height figures in () represent the dimensions when fully reclined.
Weight	(N.W)105KG 、 (G.W)123KG
Outer material	PU leather, Fabric
Accessories	Main power cord,manual book,warranty card

